



Clearing a Sensor Hose

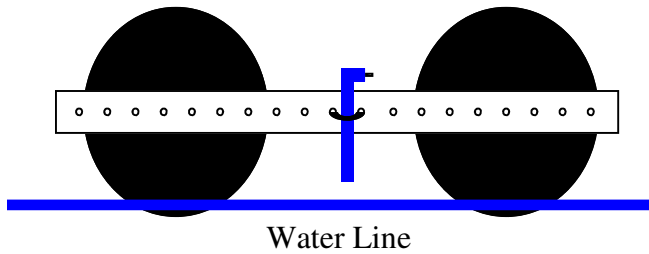

Before beginning this process raise the lift completely so that the sensor pvc tube that is mounted on the lift is out of the water.

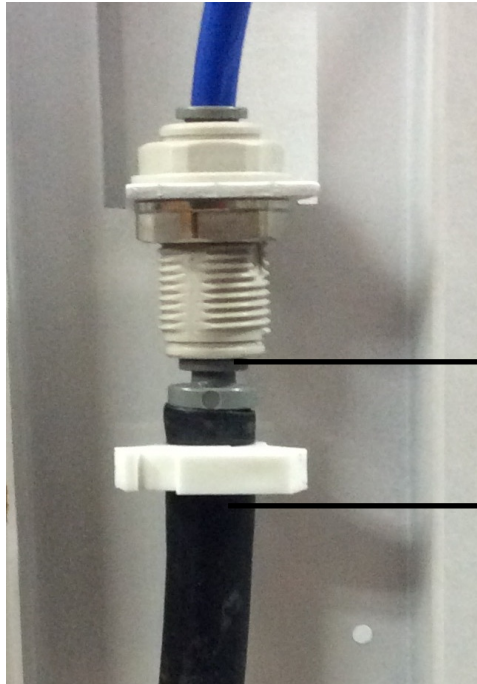

Step 1: Lift up on the underside of the Quick Connect fitting.

Step 2: While holding step 1 pull down on the sensor hose to release the hose from the fitting.



Step 3: Blow through the hose fitting until water trickles from the pvc sensor tube on the lift.

*You should hear the water trickle out and you will feel the hose clear.

Step 4: Reconnect the sensor hose by firmly pushing it back into the quick connect fitting

Run your lift down to the board position. If the problem has been corrected the lift should stop at your desired board position that was previously set. If the problem persists a service call may be required to correct a faulty part. Contact the Firstmate office @ 1-800-570-9707 to discuss further options or steps.